

# Gefen TOOLBOX

## DVIKVM Extra Long Range Extender

**GTB-DVIKVM-ELR  
User Manual**



[www.gefentoolbox.com](http://www.gefentoolbox.com)

## ASKING FOR ASSISTANCE

---

### Technical Support:

Telephone (818) 772-9100

Fax (818) 772-9120

### Technical Support Hours:

8:00 AM to 5:00 PM Monday thru Friday.

### Write To:

Gefen LLC  
c/o Customer Service  
20600 Nordhoff St  
Chatsworth, CA 91311

[www.gefen.com](http://www.gefen.com)  
[support@gefen.com](mailto:support@gefen.com)

### Notice

Gefen LLC reserves the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.

**DVIKVM Extra Long Range Extender**  
is a trademark of Gefen LLC

© 2011 Gefen LLC, All Rights Reserved.  
All trademarks are the property of their respective owners.

# CONTENTS

---

- 1 Introduction
- 2 Operation Notes
- 3 Features
- 4 Sender Unit Layout
- 5 Sender Unit Descriptions
- 6 Receiver Unit Layout
- 7 Receiver Unit Descriptions
- 8 Connecting and Operating the DVIKVM Extra Long Range Extender
- 9 DIP Switch Configuration
- 12 Firmware Update
- 13 Network Cable Wiring Diagram
- 14 Mounting Plate Installation
- 15 Specifications
- 16 Warranty

# INTRODUCTION

---

Congratulations on your purchase of the GefenToolBox DVIKVM Extra Long Range Extender. Your complete satisfaction is very important to us.

## About Gefen

We specialize in total integration for your home theater, while also focusing on going above and beyond customer expectations to ensure you get the most from your hardware. We invite you to explore our distinct product line. Please visit <http://www.gefen.com> for the latest offerings in High-Definition signal solutions or call us between the hours of 8:00 am and 5:00 pm Monday-Friday, Pacific Standard Time for assistance with your A/V needs. We'll be happy to assist you.

## Why GefenToolBox?

The GefenToolBox line offers portable and easy-to-install solutions for common A/V system integration setups using DVI and HDMI connectivity. GefenToolBox products are wall-mountable and small in size. GefenToolBox products are easily transported in the field and are ready for immediate and simple installations in working environments. These products come finished in a glossy color to blend in with either a white wall or black cabinet.

## The GefenToolBox DVIKVM Extra Long Range Extender

The DVIKVM ELR extender extends any DVI, Ethernet, RS-232, and USB source from a computer to a monitor, touch screen display, or other digital signage application over a distance up to 330 feet (100 meters) using two Cat-5 cables.

USB 2.0 data rates up to 480 Mbps are supported in addition to backward-compatibility with USB 1.1. The Receiver Unit allows the connections of up to two (2) USB devices, providing access to printers, scanners, cameras, external storage media, digital signage, and automated control systems.

This product uses Gefen ELR technology, allowing DVI, Ethernet, and RS-232 signals to travel along the same Cat-5 cable, reducing cabling costs and providing easier installation. A second Cat-5 cable is used for USB extension.

## How It Works

Place the DVIKVM ELR Sender Unit next to the DVI source. Use the included DVI cable to connect the computer or other DVI source to the Sender Unit. Use the supplied USB cable to connect the USB host (source) device to the USB port on the Sender Unit. Connect the Receiver Unit to the monitor or digital signage display with a DVI cable. Connect the USB devices to the Receiver Unit. Use two Cat-5 cables, up to 330 feet (100 meters), to connect the Sender Unit to the Receiver Unit. Connect the included locking power supplies to the Sender Unit and Receiver Unit, and then connect both power cords to available electrical outlets.

## OPERATION NOTES

---

### **PLEASE READ THESE NOTES BEFORE INSTALLING OR OPERATING THE DVIKVM EXTRA LONG RANGE EXTENDER**

- CAT-5 or CAT-6 cables should not exceed 330 feet (100 meters).
- Shielded (STP) CAT-5 or CAT-6 is recommended. However, un-shielded (UTP) CAT-5 or CAT-6 is acceptable.

**NOTE:** The shielded cable has an advantage by providing immunity to Electromagnetic Interference (EMI), cell phones and A/C motors.

- The GefenToolBox DVIKVM Extra Long Range Extender Over One CAT5 features the ability to generate compatible EDID and Hot Plug signals when working with different brands of source devices and monitors.
- This product does not support HDCP content with DVI.

# FEATURES

---

## Features

- Supports DVI resolutions up to 1920x1200 @ 60 Hz or 1080p at 330 feet (100 meters)
- Extends USB 2.0 up to 330 feet (100 meters)
- Supports USB 2.0 480 Mbps
- Backward-compatible with USB 1.1 devices
- Extends Ethernet and RS-232 signals
- Works with PC and Mac computers
- Locking Power Supplies
- Wall-mountable


## Package Includes

- (1) GefenToolBox DVIKVM Extra Long Range Extender - Sender Unit
- (1) GefenToolBox DVIKVM Extra Long Range Extender - Receiver Unit
- (1) 6 ft. DVI Cable (M-M)
- (1) 6 ft. USB cable (A-B)
- (2) 5V DC Locking Power Supplies
- (1) User Manual


# SENDER UNIT LAYOUT

---

## Right Side

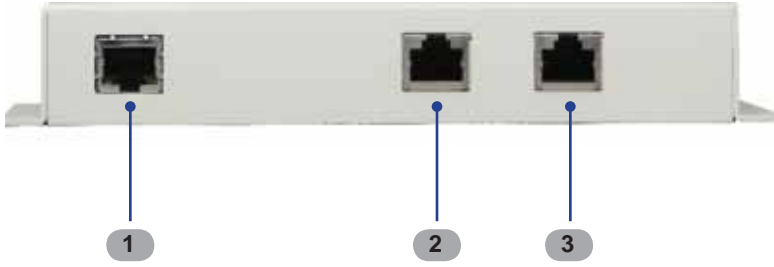

## Left Side

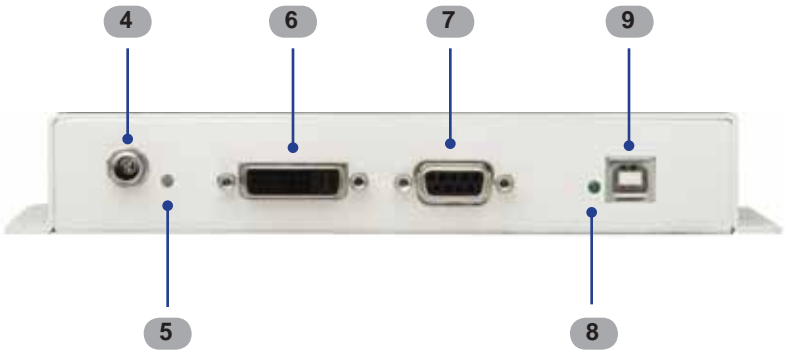

## SENDER UNIT DESCRIPTIONS

---

**1 USB Link Connector**

Connects the USB signals from the Sender Unit to the Receiver Unit using CAT-5e / CAT-6 cable.

**2 DVI / RS-232 Link Connector**

Connects the DVI and RS-232 signals from the Sender Unit to the Receiver Unit using CAT-5e / CAT-6 cable.

**3 Ethernet Input**

Connect a CAT-5 cable from a port on a local Ethernet switch to this jack. The DVIKVM-ELR supports 10/100BaseT Ethernet.

**4 5 V DC Locking Power Connector**

Connect the included 5 V DC locking power supply to this connector.

**5 Power Indicator**

This LED will glow red once the included 5V DC locking power supply has been properly connected to the unit and the locking power supply has been connected to an available electrical outlet.

**6 DVI In**

Connect a DVI cable from the computer to this DVI-I connector.

**7 RS-232 Port**

Connect a RS-232 Serial Cable from the RS-232 host device to this port.

**8 USB Indicator**

This LED glows green when a USB device is connected to the Sender Unit.

**9 USB In**

Connects the Sender Unit to the computer using a USB cable.

**10 DIP Switches 1 - 2 (on bottom of Unit)**


See pages 9 - 11 for details on configuring the DIP switches.




# RECEIVER UNIT LAYOUT

---

## Right Side

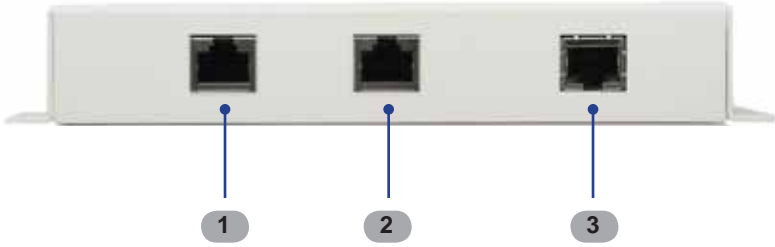

## Left Side

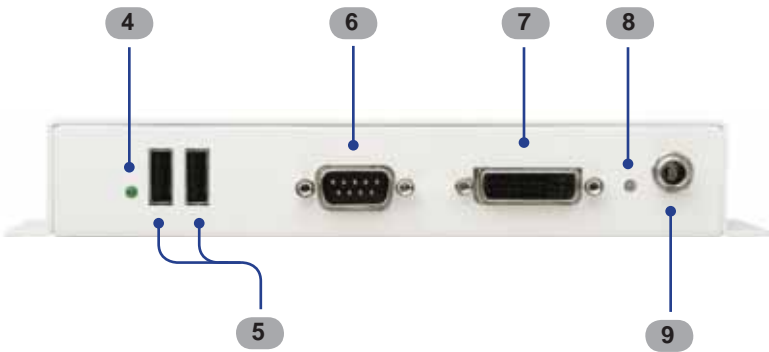

## RECEIVER UNIT DESCRIPTIONS

---

**1 Remote Ethernet Port**

Connect a CAT-5 Cable from this jack to the remote device that needs an Ethernet LAN connection. Up to 100BaseT speeds are supported.

**2 DVI / RS-232 Link Connector**

Connects the DVI and RS-232 signals from the Receiver Unit to the Sender Unit using CAT-5e / CAT-6 cable.

**3 USB Link Connector**

Connects the USB signals from the Receiver Unit to the Sender Unit using a second CAT-5e / CAT-6 cable.

**4 USB Indicator**

This LED glows green when a USB source is connected to the Receiver Unit.

**5 USB Output Connectors**

Connect the USB remote devices, such as a keyboard and mouse, to these ports.

**6 RS-232 Port**

Connect an RS-232 Serial Cable from this port to the device being controlled.

**7 DVI Out**

Connect a display to this DVI-I connector.

**8 Power Indicator**

This LED will glow red once the included 5V DC locking power supply has been properly connected to the unit and the locking power supply has been connected to an available electrical outlet.

**9 5V DC Locking Power Connector**

Connect the included 5 V DC locking power supply to this connector.

# CONNECTING AND OPERATING THE DVIKVM EXTRA LONG RANGE EXTENDER


## How to Connect the DVIKVM Extra Long Range Extender

1. Connect the computer DVI output to the Sender Unit using the provided DVI cable. Connect the monitor to the Receiver Unit using a DVI cable.
2. Connect the included USB cable from the computer to the Sender Unit.
3. Connect the USB devices to the Receiver Unit.
4. Connect the Ethernet port on the Sender Unit to an Ethernet source.
5. Connect the Ethernet port on the Receiver Unit to the Ethernet (LAN) port on the display device.
6. Connect the RS-232 ports to the host and display devices.
7. Connect CAT-5e or CAT-6 cables between the Link ports on the Sender Unit and the Link ports on the Receiver Unit.

**NOTE:** If terminating network cables in the field, please adhere to the TIA/EIA568B specification (see page 13).

5. Connect the 5V DC locking power supplies to the Sender Unit and Receiver Unit. Do not overtighten the locking connectors. Plug the two (2) AC power cords from the power supplies to available electrical outlets.

## Wiring Diagram for the DVIKVM Extra Long Range Extender Over One CAT5

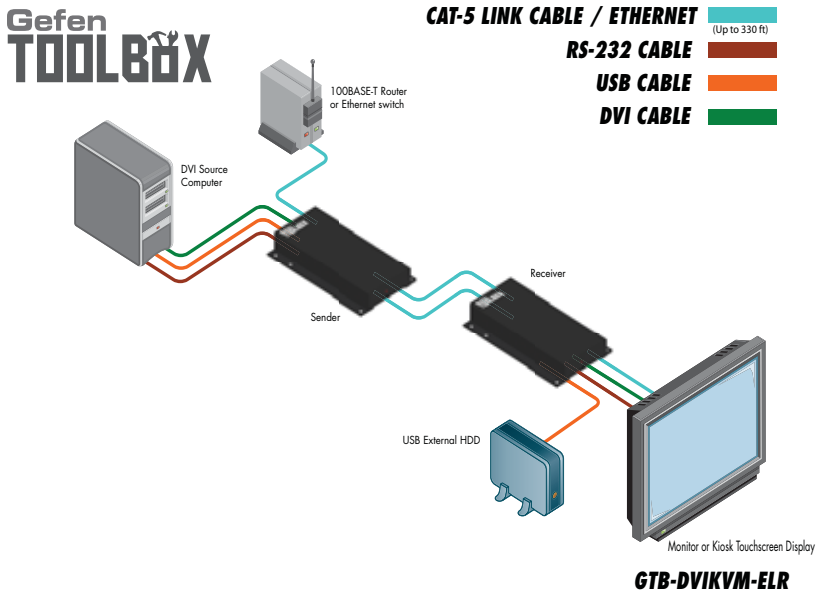


# DIP SWITCH CONFIGURATION

---

## Sender Unit

The Gefen DVIKVM Extra Long Range Extender contains DIP switches on the bottom of the Sender Unit. Each DIP switch performs a different function.

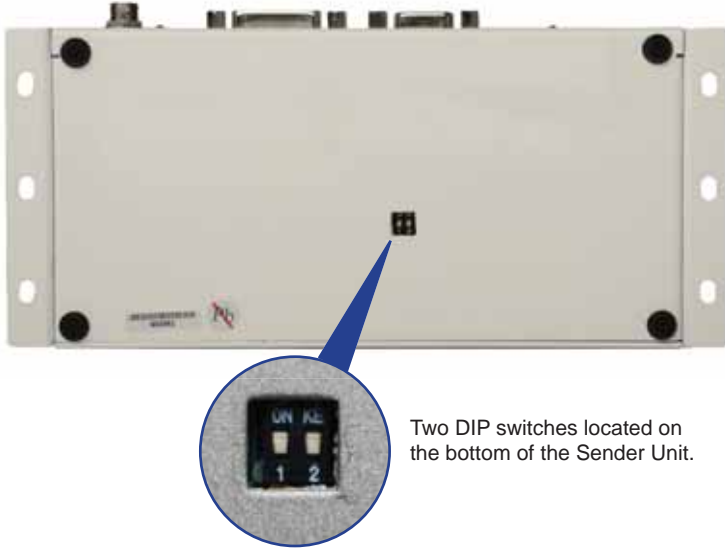

Two DIP switches located on the bottom of the Sender Unit.

### ***DIP Switch 1 - Power Management (Default = ON)***

- **OFF** - Enable Green Mode

Sender and Receiver Units are ON only when the DVI source is active. This is the default position. If the DVI source enters sleep mode then both the Sender and Receiver Units will enter Standby (“Green”) Mode.

- **ON** - Disable Green Mode

Sender and Receiver Units are always ON.

### ***DIP Switch 2 - RS-232 Mode (Default = OFF)***

- **OFF** - Pass-through Mode

Pass-through mode for RS-232. This is default position.

- **ON** - Firmware Upgrade Mode


Firmware Upgrade mode (See page 12 for instructions). If DIP switch 2 is in the ON position, RS-232 cannot be extended.

# DIP SWITCH CONFIGURATION

---

## Receiver Unit

The Gefen DVIKVM Extra Long Range Extender contains four (4) DIP switches on the bottom of the Receiver Unit. Each DIP switch performs a different function.

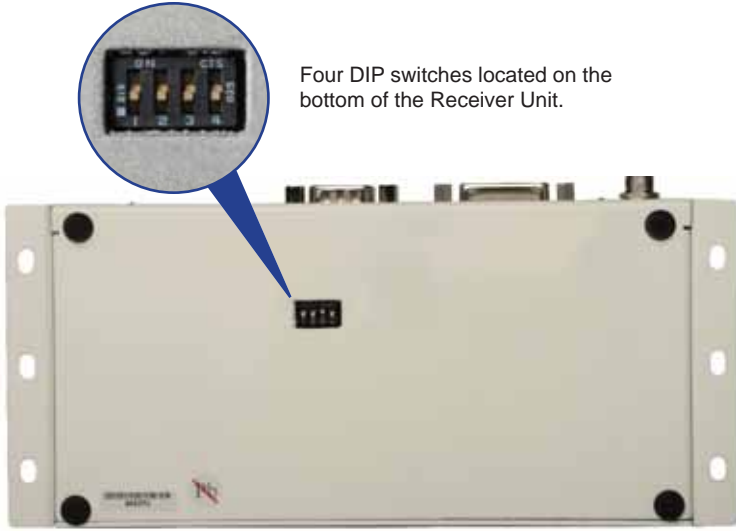

Four DIP switches located on the bottom of the Receiver Unit.

### ***DIP Switch 1 - EDID Mode (Default = OFF)***

- **ON** - Pass-Through Mode

DDC and HPD are passed through. Both the connection status and the full video capabilities of the monitor are used by the source device.

- **OFF** - Local EDID Mode

Local EDID is used instead of the EDID from the display device. EDID features newer than HDMI 1.3 are removed when the display is read. This provides a general EDID which is compatible with more displays.

## DIP SWITCH CONFIGURATION

---

### ***DIP Switch 2 - Hot Plug Detect (Default = OFF)\****

- **ON** - HPD Pass-Through

HPD follows upstream HPD towards the source. The HPD signal will reflect the connection status between the display device and the source device. If the source or monitor is temporarily disconnected then reconnected, there will be a delay of 20 - 30 seconds before the content is restored to the monitor.

- **OFF** - HPD Always High

The HPD signal remains high regardless of the downstream HPD state. If the source or monitor does not properly handle HPD (no picture after connecting / reconnecting source or display), set this DIP switch to the OFF position.

### ***DIP Switch 3 - Supports DVI Connections (Default = ON)\****

- **ON** - Disable HDCP

If a DVI connection is used, set DIP 3 to the ON position. DVI is supported by disabling HDCP pass-through.

- **OFF** - Enable HDCP

If an HDMI device is connected, set DIP 3 in the OFF position.

### ***DIP Switch 4 - RS-232 Mode (Default = OFF)***

- **ON** - Enable Field Upgrade Mode

Allows the firmware to be updated on the Receiver Unit. If DIP switch 4 is in the ON position, RS-232 cannot be extended. See page 12 for details on upgrading the firmware.

- **OFF** - Pass-through Mode

When extending RS-232 between the Sender Unit and the Receiver Unit, DIP switch 4 must be set to the OFF position.

\*DIP switch is only operational when using Local EDID (DIP 1 = OFF).

# FIRMWARE UPDATE

---


## Updating the Firmware

1. Connect an RS-232 cable from the computer to the Sender Unit.
2. Set DIP switch 2 to the ON position.
3. Connect the 5V DC locking power supply to the Sender Unit.
4. Go to the directory where the firmware files are stored.
5. Double-click the .BAT file. A screen similar to the following will appear:

```
Found sink on port 4
Autodetect platform: full sink
Autodetect platform: spi.
Autodetect size: 128k
Erasing Eeprom....Done.
progress: 100%
Total bytes: 38804. Total time: 99.906000 seconds
Burn succeeded.
Verifying file...
progress: 100%
Total bytes: 38804. Total time: 88.266000 seconds
Verification succeeded!!!
```


1. Set DIP switch 2 to the OFF position.
2. Repeat the same procedure for the Receiver Unit (use DIP switch 4).

## NETWORK CABLE WIRING DIAGRAM

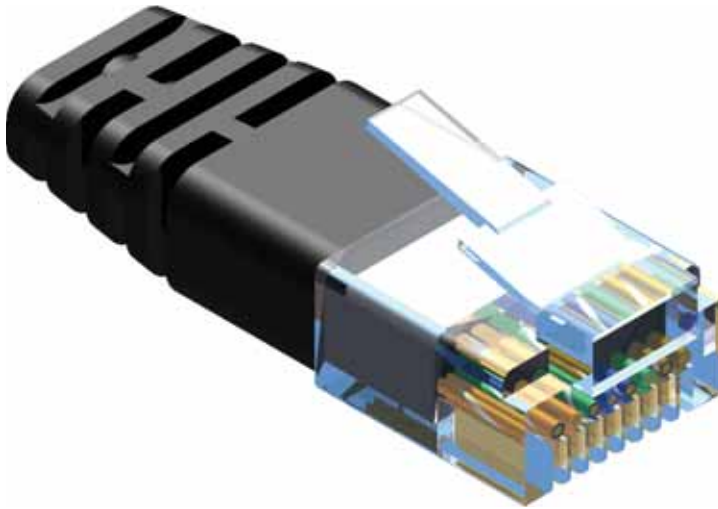

Gefen recommends the TIA/EIA-568-B wiring option. Please adhere to the table below when field terminating cable for use with Gefen products.

Pin	Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown

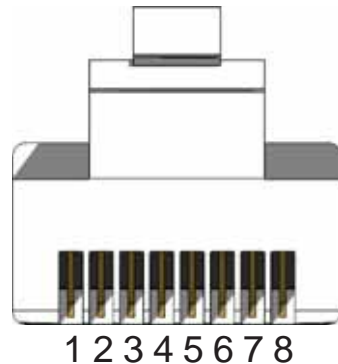


CAT-5, CAT-5e, and CAT-6 cabling comes in stranded and solid core types. Gefen recommends using solid core cabling.

It is recommended to use one continuous run from one end to the other. In some cases, connecting through a patch might not work.



## WALL MOUNTING INSTRUCTIONS

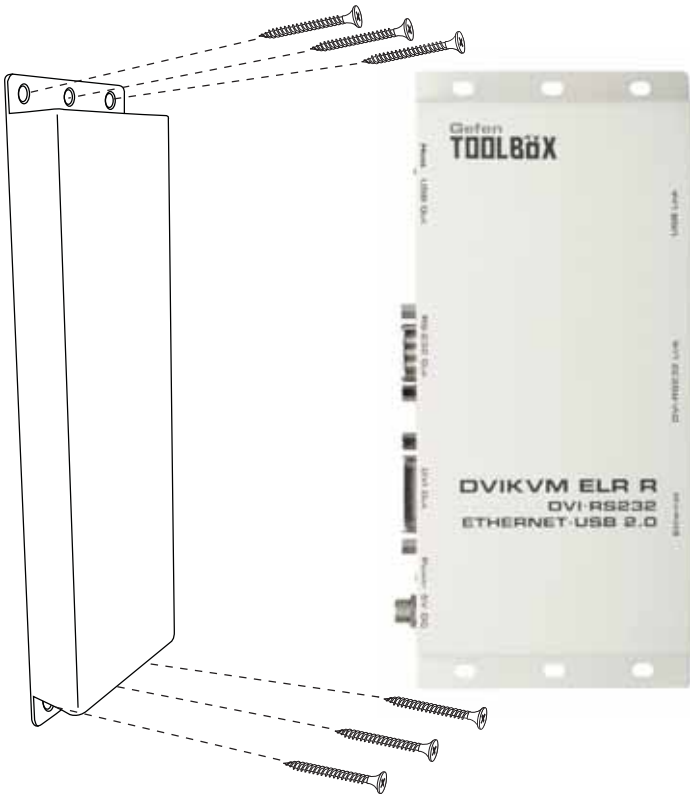

The GefenToolBox DVIKVM ELR Sender and Receiver may be mounted vertically in a wall or cabinet with wood/drywall screws as shown in the diagram above. There should be an inch or two of clearance between the edges of the unit and any walls or vertical surfaces to allow for enough clearance for insertion and retraction of cables at the DVI and RS-232 connectors.

For installation on a drywall surface, use a #6 drywall screw. It is recommended when installing on a drywall surface that studs be used to secure the Splitter should undue stress be applied when connecting and disconnecting HDMI cables.

## SPECIFICATIONS

---

Maximum Pixel Clock.....	165 MHz
Input Video Signal.....	1.2 Volts p-p
Input DDC Signal.....	5 Volts p-p (TTL)
DVI Connector (Sender / Receiver).....	DVI-I 29-pin, female
USB Connector (Sender).....	(1) Type B
USB Connector (Receiver).....	(2) Type A
Ethernet Connector (Sender / Receiver).....	RJ-45 (1 per unit)
Link Connector (Sender / Receiver).....	(4) RJ-45 (2 per unit)
RS-232 Connector (Sender).....	DB-9, female
RS-232 Connector (Receiver).....	DB-9, male
RS-232 Baud Rate .....	19200 bps
Power Supply (Sender / Receiver).....	5 V DC
Power Consumption.....	10 W per unit (max.)
Operating Temperature.....	0 - 40 °C
Dimensions.....	3.6" W x 7.5" H x 1.3" D (Wall Mount)
Shipping Weight.....	3 lbs.

## WARRANTY

---

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty or merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, please visit Gefen's Warranty web page at <http://www.gefen.com/kvm/aboutus/warranty.jsp>

## PRODUCT REGISTRATION

**Please register your product online by visiting Gefen's web site at <http://www.gefen.com/kvm/Registry/Registration.jsp>**



20600 Nordhoff St., Chatsworth CA 91311

1-800-545-6900 818-772-9100 fax: 818-772-9120

[www.gefen.com](http://www.gefen.com) [support@gefen.com](mailto:support@gefen.com)



This product uses UL listed power supplies.